


SmartROC T25/T30 R, T30 RX


Start-up



Read the safety precautions in the **transport instruction**.

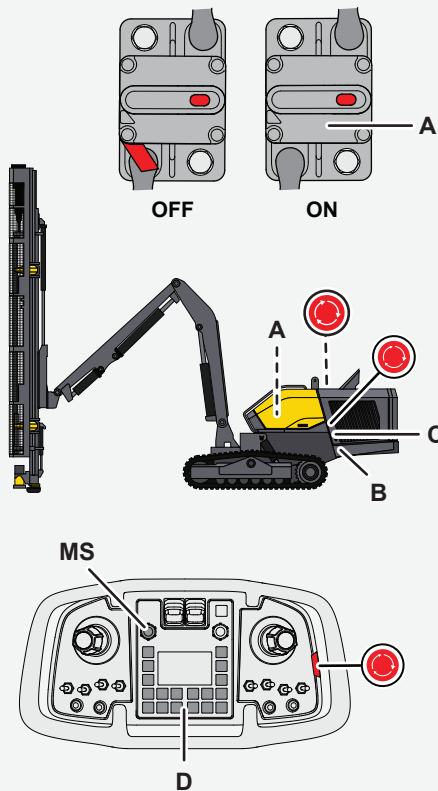


- 1 Check that circuit breaker (A) is ON. Turn the battery isolation switch to ON position (B).

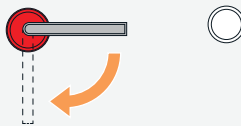

- 3 Press and hold start button (D) for 4 seconds to start the remote control.




- 5 Reset emergency stops (C).

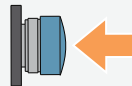

- 7 Sound the horn (D)



- 2 Release all emergency stops.

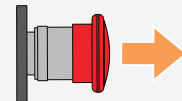

- 4 Establish radio communication (D).



- 6 Activate tramming mode (MS).




- 8 Start the engine (D).



If the buttons on the remote control are not used for 10 seconds, the remote control goes into standby. Press the signal horn button (C) to reactive the remote control.


Driving

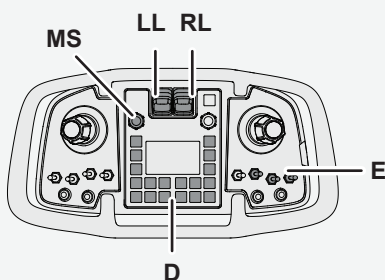

- 9 Raise the jack (E).



- 10 Unlock track oscillation (D).

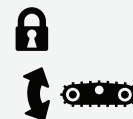

MS (Mode Selector): Select operating mode
LL (Left Lever): Left track, back and forward
RL (Right Lever): Right track, back and forward

SmartROC T25/T30 R, T30 RX

Driving

- 11** Activate **Tramming** mode (MS).




- 12** Position the boom and feed.



See the Positioning instructions



- 13** Operate the tracks (LL, RL).

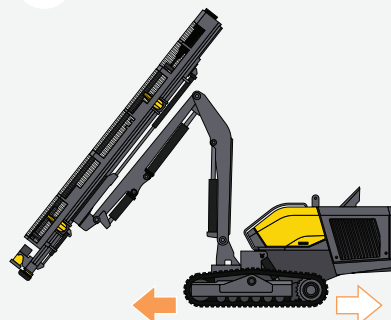

- 14** Adjust track oscillation (E).



- 15** Lower the jack (E).



- 16** Lock track oscillation (D).




- 18** Stop the engine (D).



- 19** Wait until the red lamp is off. Turn the battery isolation switch to OFF position (B).
On machines that have no lamp. Turn the battery isolation switch to OFF position.



- 21** Activate the emergency stop at the remote control.

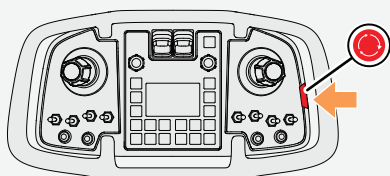

- 17** Adjust the boom to transport position.



See the Positioning instructions



- 20** Press and hold start/stop button (D) to turn off the remote control.



- 22** Press button (F) to set the circuit breaker (A) to OFF position.

